- · Intelligent Health Care
- · Healthy Life





909MRX Infrared Sauna

Installation & Owner's Manual

Please read this entire manual thoroughly before proceeding with the assembly.

CATALOGS

- 01 PRECAUTIONS AND INSTRUCTION
- 02 INSTALLATION GUIDE
- 09 OTHER FUNCTIONS
- 10 CONTROL PANEL INSTRUCTION
- 11 SPECIFICATIONS

PRECAUTIONS AND INSTRUCTION

ATTENTION

Please read all instructions thoroughly before using.

Serious injury may result if ignore the following warning and instruction. Basic precautions should always be followed when using this electrical equipment.

DANGER

To avoid the risk of causing burns, fire, electric shock, or other injuries:

- Connect the power cord to a properly grounded outlet.
- Using only for its intended use as described in this manual.
- Don't use accessories not recommended by the manufacturer.
- Please disconnect the power after using.
- Please keep the electrical cord away from heated surfaces.
 If the sauna is faulty, the supply cord or plug is damaged, please stop using it immediately.

WARNINGS

- Don't stay longer than one hour.
- Don't put the sauna on a humid environment.
- Don't touch the heater directly with hands or body for a long time.
- Don't use any sharp tools on or near the heaters (severe damage may result).
- Placing the sauna on a flat surface.
- Unauthorized disassembly of the sauna is prohibited.
- People with health problems should consult a physician for prior to using the sauna. (Including acute diseases, malignant tumors, high blood pressure, heart disease, allergic dermatitis, pregnancy, etc.)
- This product is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of adequate

experience knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Using a sauna after taking alcohol, drugs, or medication can lead to hyperthermia and increase the risk of death.
- If you are feeling uncomfortable, exit the sauna immediately and consult a doctor.
- Children should be supervised to ensure that they do not play with the appliance.

HYPERTHERMIA

Prolonged exposure in the sauna may cause hyperthermia. Hyperthermia occurs when body's core temperature rises above 98.6F. Symptoms of hyperthermia include a rise in body temperature, dizziness, lethargy, drowsiness, and fainting. The effects of hyperthermia may include:

- a) Failure to perceive heat / Unawareness of impending heat
- b) Failure to recognize the need to exit the sauna
- c) Fetal damage in pregnant women
- d) Physical inability to exit the sauna
- e) Unconsciousness

INSTALLATION GUIDE

Each panel is heavy, especially the top panel. Be careful to avoid injury when installing. This sauna requires at least 2 adults to complete assembly. The panels should be install in the following order:

Floor Panel→Rear Panel→Left Panel→Right Panel →Install the left glass→
Install the door handle→Bench Support Panel→Bench surface Panel→
Front Panel →Place the front panel wire→Install the top→Connect the wires

Step 1: Position the Floor Panel



Place the floor panel on a flat support. Before assembly, make sure the floor is flat so that you can maintain a comfortable subsequent installation.(image1)

Step 2: Position the Rear Panel



Lift the rear panel into position wedging the bottom of the panel into the channel in the floor panel, you can gently rest the rear panel against the wall of your home.

(image 2)

Step 3: Position the Left Side Panel



Place the left panel into the slot of the floor panel and push it towards the rear panel. Check whether the hooks of the fasteners are up or down, and the fasteners are connected together as shown. (image 3)

(image3)

Step 4: Position the Right Side Panel

Place the right panel into the slot of the floor panel and push it towards the rear panel. Check whether the hooks of the fasteners are up or down, and the fasteners are connected together as shown. (image 4)



(image 4)

Step 5: Position the Left Side glass

Please install the screws to fix the glass as shown in the diagram. First, insert the white plastic part into the hole, then tighten the screw, and finally cover it with the screw cap. (image 5)



(image 5)






Step 6: Install the door handle

Please install according to the photo and tighten the door handle, so it can be used.(image 6)



Step 7: Place the Bench Support Panel

Place the Bench Support panel (image6&7) and connect the wires behind (image8&9). Each two wires have corresponding unique interface shape, hear a click to indicate that the connection is completed.

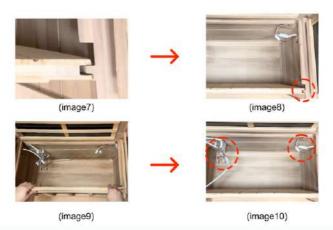

Step 8: Place the Bench Surface Panel

Place the bench surface panel (image 11), and please make sure to always install the Bench Surface panel before installing the Front Panel, otherwise it will not fit inside due to space limitations.



(image11)

Step 9: Place the Front Panel

Please install the glass seal strip on the front panel first, then place the front panel into the slot on the base. Attach the other end of the glass seal strip to the glass on the side panel.



Step 10: Place the Front Panel

Please check if the front door is assembled and connect the heating panel on the door with the connection port on the bottom.



Step 11: Install the top

Please install the top of the sauna. Make sure that all wires on the side panel through the holes.



Step 12: Connect the wires

Please connect all the wire ports. After connecting, pull them slightly to check for looseness.





(image13)

(image14)

Step 13: Enjoy your Sauna

Congratulations, you have successfully assembled a sauna. Plug in the sauna, and enjoy your sauna time.







OTHER FUNCTIONS





Color Lamp



Reading lamp




Vent



Bluetooth

BT SPEAKER

CONTROL PANEL INSTRUCTION

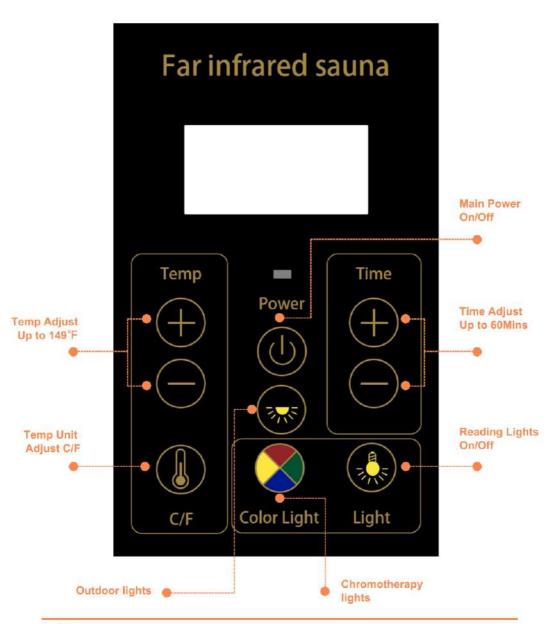

SPECIFICATIONS

Product Name	Far Infrared Sauna
Model	909MRX
Dimensions	36.5*32.3*66.6 in
Voltage	110-120VAC
Plug Type	15 Amps
Wattage	1100 W
Number of Heaters	6 pcs
Raw Material	Red Cedar
Location	Indoor

FOR SAUNA ROOM

- Place a large towel over the seat and baseboard before use to absorb excess sweat and prevent it from eroding the equipment.
- In order to prevent colds during use, it is recommended that the temperature be gradually lowered until the body gradually adapts to room temperature before stepping out of the equipment.
- If there is a lot of sweating after using the device, it is recommended to take
 a shower after 60 minutes, or use a room temperature wet towel to wipe the
 body after using the device, which is also an alternative to showering. It is
 also a good alternative to showering and is better for the skin.
- After use, open the door and ventilate for about 10 minutes, during the ventilation process, the device can be turned off, and the residual temperature can also be used to evaporate the internal water vapor.
- If there is sweat dripping onto the surface of the board or heating plate, etc., you can use a damp towel to wipe it in time to prevent discoloration and leaving stains, etc.
- The door just has a magnetic suction device, can not prevent violent entry, please pay attention to children, the elderly, pets and other bad entry.
- It is strictly prohibited to add locking devices to the door when using it, and it must be ensured that people can enter and exit conveniently at any time.

WARRANTYCERTIFICATE

Please complete the following details and send back with the original item/parts with safety package.

Client's Name:	
Address:	
City:	
Postcode:	Model No:
Telephone:	Order No:
Date of Purchase:	
Store from which product was purchased:	
Problem Description:	

 We provide 1year free maintain service for part of main electric equipment from when your purchase, please enclose this warranty card when you return back. Without this warranty card or change the warranty card, the maintain will not be provided.

